



THE BRICKHOUSE GROUND BLIND

Instruction and Safety Manual



 Model #2317
Realtree® AP HD™

**HST**
HUB-STYLE TECHNOLOGY

**NS³**
TECHNOLOGY
NO SHINE NO SHADOW NO SOUND

**Be sure to follow these guidelines for using your Product.
READ AND UNDERSTAND ALL INSTRUCTIONS and WARNINGS FIRST**
Any questions or confusion regarding the use of this product contact our Customer Service Department.

SAFETY MUST BE FIRST PRIORITY WITH USE OF THIS PRODUCT

2009
©2009 (rev 1/09)

Page 1

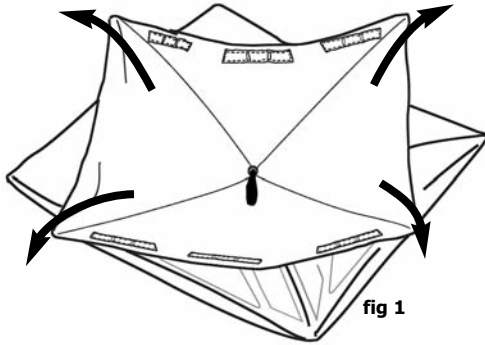


fig 1

Step 1: After removing Blind from case, unfold each corner outward and lay flat on ground (fig 1). Be sure material is NOT twisted or overlapping ends of poles.

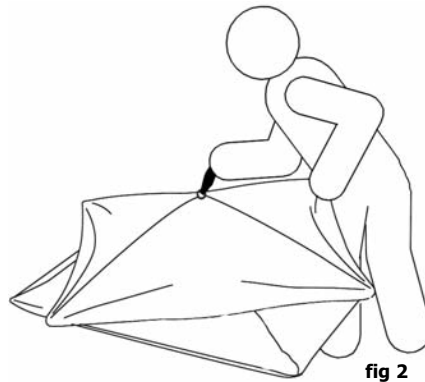


fig 2

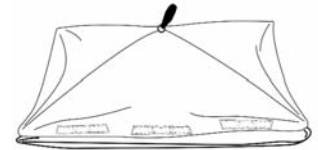


fig 2a

Step 2: Firmly pull center hub of roof pull so it pops up (fig 2). Twist top of blind so corners of top and bottom line up (fig 2a). This will make for easy set up when opening wall hubs.



fig 3

Step 3: Lift top of blind so that you have access to center hub pole of one of the walls (fig 3).


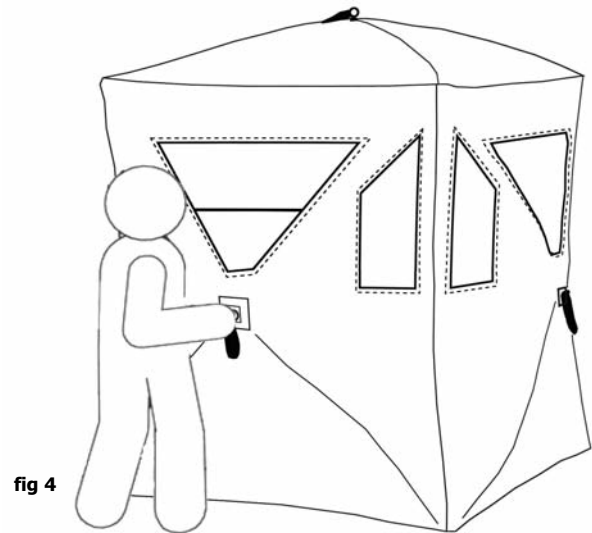


fig 4

Step 4: Continue around blind, pulling each hub of walls. Until **all but door side** hub is extended.

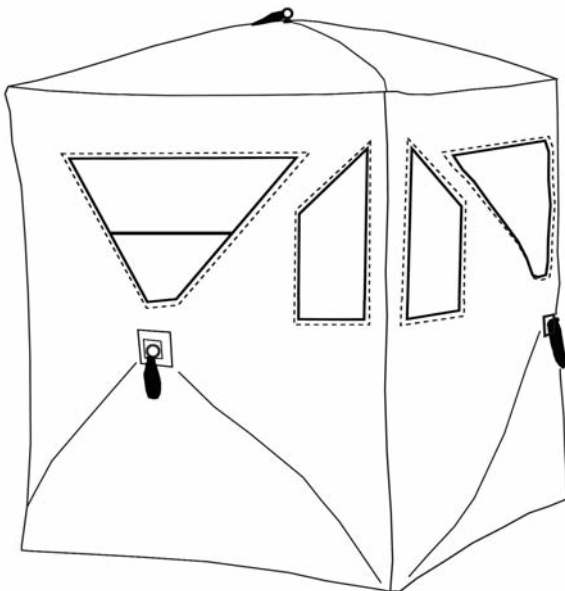

IMPORTANT:

Make sure door zippers are fully closed so wall will keep tension.
Now pull **DOOR HUB** out.

After standing blind upright, spread each side.
Use stakes and High-Wind Tie-Downs to secure blind to ground.

! IMPORTANT: Be sure to remove all native brush, dirt and debris **BEFORE** beginning take down. Remove Ground Stakes and store in pouch provided.

To aid in ease of folding blind, be sure **ALL WINDOWS** are up and secured.

Step 1: Close and secure windows from interior. Exit Blind.

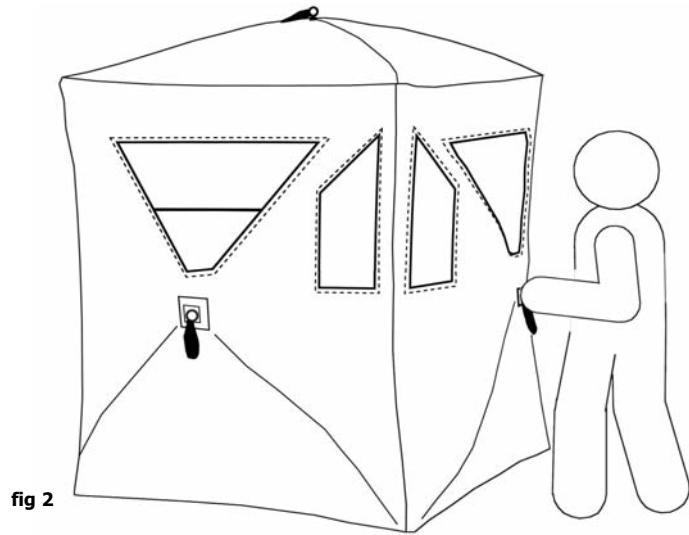


fig 2

Step 2: With an open palm, push center hub of one of walls. The tension will give.

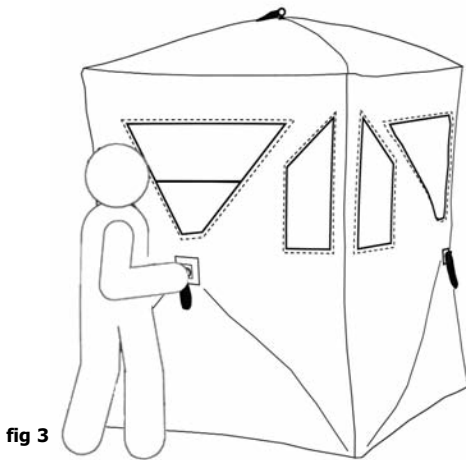


fig 3

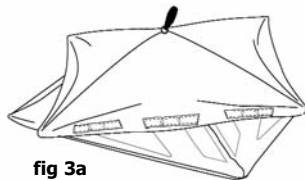


fig 3a

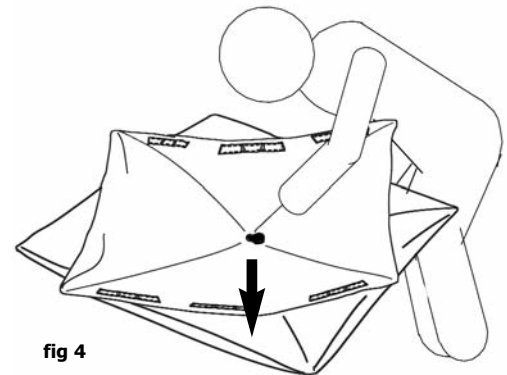


fig 4

Step 4: With an open palm, push center hub of roof. The tension will begin to lessen.

Step 3: Repeat on remaining walls (fig 3). Once all **WALL HUBS** have been pushed in, the blind will collapse onto ground. Twist roof so that blind corners are as shown (fig 3a).

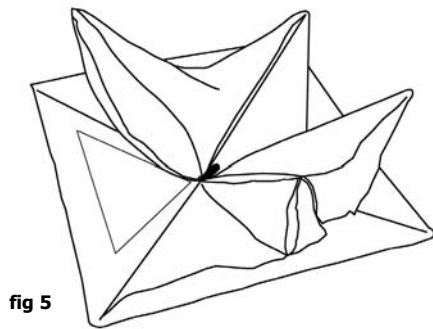


fig 5

Step 5: Blind should now look like this. (above)


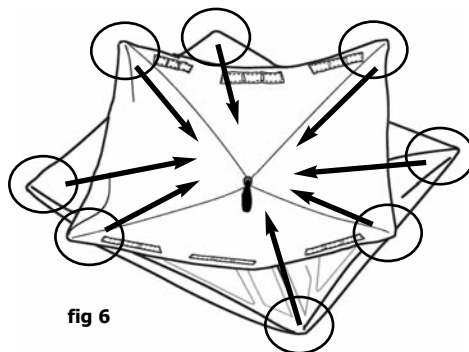


fig 6


Step 6: Gather ALL outside corners together (fig 6).

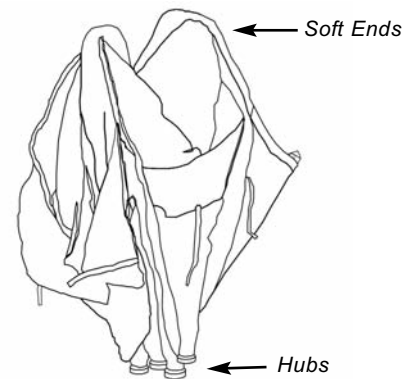


Step 7: Place in Backpack with **HUBS AT THE BOTTOM** and **SOFT ENDS** at top.

PARTS LIST

- 1 Ground Blind (75" Shooting Width x 66" Tall)
- 1 Carrying Back Pack Case
- Ground Stakes
- High Wind Tie-Downs
- Packed: 12" Thick x 46" Long
- Weight: 18 lbs.

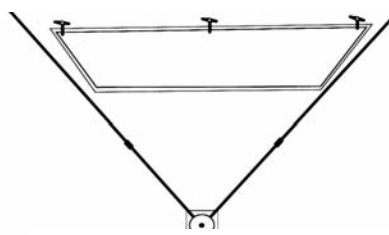

WINDOW CLOSED

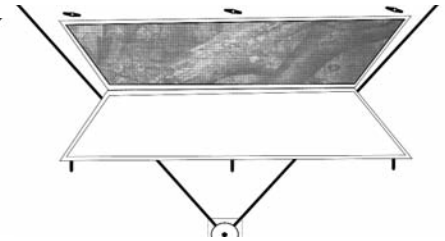

WINDOW OPEN

WINDOWS: Open and Close windows with elastic loop over Oval Buttons. LARGE WINDOW OPENINGS can be opened half-way or fully opened.



STORAGE AND TIPS

- Store Blind in a cool dry place - free native brush, dirt and any debris
- Never store Blind wet or damp
- Avoid leaving Blind outdoors for any extended period of time. Prolonged exposure to sunlight may cause fabric to fade.
- To stop any leakage, use seam sealer on all seams and silicon spray on seams/sidewalls.

CPAI-84 WARNING

⚠ WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM TENT FABRIC.

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source.

This tent is made of flame-resistant fabric. It is not fireproof. The fabric will burn if left in continuous contact with a flame source. DO NOT use candles, matches or open flames of any kind in or near a tent; DO NOT cook inside a tent; DO NOT smoke in a tent; DO NOT store flammable liquids inside a tent; build campfires downwind and several meters away from a tent and be sure to fully extinguish campfires before leaving a campsite or before retiring for the night; exercise EXTREME caution when using fuel-powered lanterns or heaters inside a tent and use battery operated lanterns whenever possible; DO NOT refuel lamps, heaters or stoves inside a tent; extinguish or turn off all lanterns before going to sleep. The application of any foreign substance to tent fabric may render flame resistant properties ineffective.

THINK SAFETY !

- NEVER USE A HEATER IN YOUR AMERISTEP® BLIND - UNVENTED FUMES COULD CAUSE SICKNESS OR DEATH
- NEVER EXPOSE YOUR BLIND TO ANY OPEN FLAME. THIS PRODUCT **IS NOT FIREPROOF**
- NEVER SHOOT THROUGH MESH WITH A FIREARM SPARKS OR FLAME FROM THE MUZZLE COULD IGNITE THE MATERIAL
- NEVER SHOOT EXPANDABLE BROADHEADS THROUGH THE TSC WINDOWS - THE MESH MAY CAUSE PREMATURE OPENING OF THE BLADES. USE FIXED BLADE BROADHEADS ONLY
- FOR BEST ARROW FLIGHT THRU TSC AND SHOOT-THROUGH MESH WINDOWS, ALIGN BROADHEAD BLADES WITH FLETCHING
- NEVER ALLOW CHILDREN TO PLAY WITH THIS PRODUCT WITHOUT ADULT SUPERVISION
- NEVER ALLOW MATERIAL TO COVER YOUR FACE. IT CAN CAUSE SUFFOCATION AND DEATH
- NEVER ALLOW ANYONE TO USE LIGHTED CANDLES, MATCHES OR OTHER SOURCES OF FIRE NEAR THIS PRODUCT
- UV (ULTRAVIOLET LIGHT) WARNING:
Ultraviolet light breaks down lightweight fabric fibers (and almost any synthetic material). The material will fade (discolor), lose strength and eventually disintegrate if left in prolonged sunlight. To extend the life of your Ameristep® product avoid leaving it out in direct sunlight. Set up your portable ground blind or accessory in a shady spot whenever possible to extend the product life.